


4 BRC1D52 - Wired remote control


4 - 2 Explanation of buttons and functions

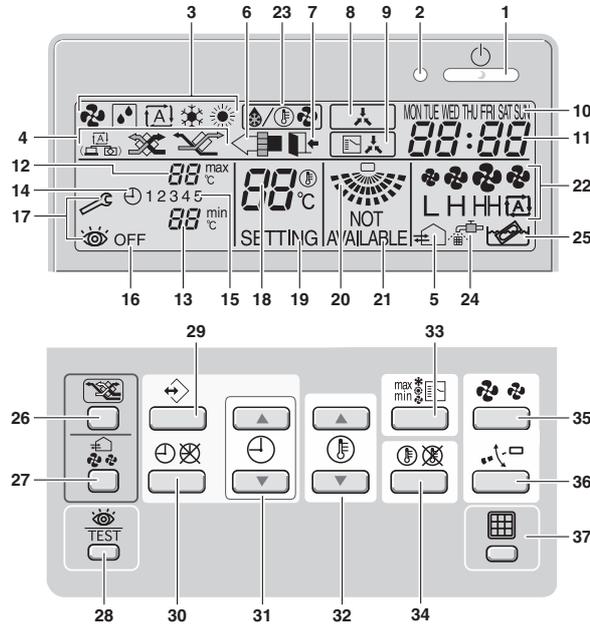

1	ON/OFF BUTTON ' '	13	MINIMUM SET TEMPERATURE ' 88°min '					
	Press the ON/OFF button to start or stop the system.		The minimum set temperature indicates the minimum set temperature when in limit operation.					
2	OPERATION LAMP ' '	14	SCHEDULE TIMER ICON ' '					
	The operation lamp lights up during operation or blinks if a malfunction occurs.		This icon indicates that the schedule timer is enabled.					
3	OPERATION MODE ICON ' '	15	ACTION ICONS ' 1 2 3 4 5 '					
	These icons indicate the current operation mode (FAN, DRY, AUTOMATIC, COOLING, HEATING).		These icons indicate the actions for each day of the schedule timer.					
4	VENTILATION MODE ICON ' '	16	OFF ICON ' OFF '					
	These icons indicate the current ventilation mode (HRV only) (AUTOMATIC, HEAT EXCHANGE, BYPASS).		This icon indicates that the OFF action is selected when programming the schedule timer.					
5	VENTILATION ICON ' '	17	INSPECTION REQUIRED ' ' and ' '					
	The ventilation icon appears when the ventilation is adjusted with the ventilation amount button (HRV only). Simultaneously, the ventilation amount is indicated by the fan speed icon (see 22).		These icons indicate that inspection is required. Consult your installer.					
6	AIR CLEANING ICON ' '	18	SET TEMPERATURE DISPLAY ' 27° '					
	This icon indicates that the air cleaning unit (option) is operational.		This indicates the current set temperature of the installation (not shown in LIMIT operation or in FAN or DRY mode).					
7	LEAVE HOME ICON ' '	19	SETTING ' SETTING '					
	The leave home icon shows the status of the leave home function.		Not used, for service purposes only.					
	<table border="1"> <tr> <td>ON</td> <td>Leave home is enabled</td> </tr> <tr> <td>FLASHING</td> <td>Leave home is active</td> </tr> <tr> <td>OFF</td> <td>Leave home is disabled</td> </tr> </table>		ON	Leave home is enabled	FLASHING	Leave home is active	OFF	Leave home is disabled
ON	Leave home is enabled							
FLASHING	Leave home is active							
OFF	Leave home is disabled							
8	EXTERNAL CONTROL ICON ' '	21	NOT AVAILABLE ' NOT AVAILABLE '					
	This icon indicates that another controller with higher priority is controlling or disabling your installation.		This is displayed whenever a non-installed option is addressed or a function is not available.					
9	CHANGE-OVER UNDER CENTRALISED CONTROL ICON ' '	22	FAN SPEED ICON ' '					
	This icon indicates that the change-over of the installation is under centralised control assigned to another indoor unit or optional cool/heat selector connected to the outdoor unit (= master remote controller).		This icon indicates the set fan speed.					
10	DAY OF THE WEEK INDICATOR ' MON TUE WED THU FRI SAT SUN '	23	DEFROST/HOTSTART MODE ICON ' '					
	The day of the week indicator shows the current week day (or the set day when reading or programming the schedule timer).		This icon indicates that the defrost/hotstart mode is active.					
11	CLOCK DISPLAY ' $88:88$ '	24	AIR FILTER CLEANING TIME ICON ' '					
	The clock display indicates the current time (or the action time when reading or programming the schedule timer).		This icon indicates the air filter must be cleaned. Refer to the manual of the indoor unit.					
12	MAXIMUM SET TEMPERATURE ' 88°max '	25	ELEMENT CLEANING TIME ICON ' '					
	The maximum set temperature indicates the maximum set temperature when in limit operation.		This icon indicates the element must be cleaned (HRV only).					
		26	VENTILATION MODE BUTTON ' '					
			The ventilation mode button operates the HRV; refer to the HRV manual for more details.					

4 BRC1D52 - Wired remote control

4 - 2 Explanation of buttons and functions

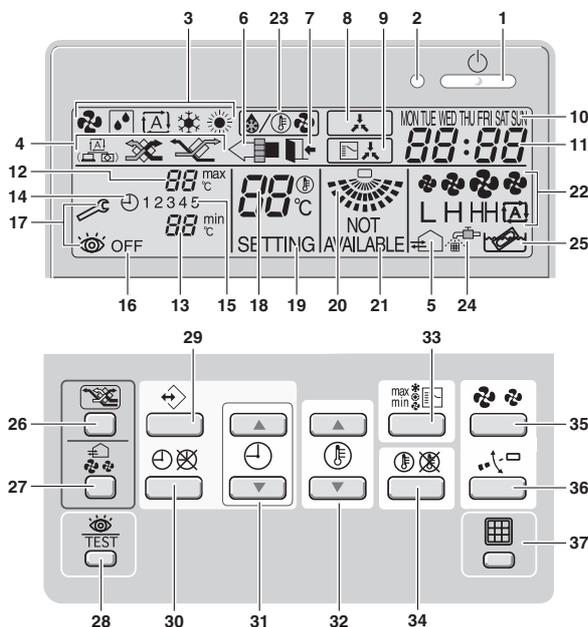

27	VENTILATION AMOUNT BUTTON ' '	33	OPERATION CHANGE/MIN-MAX BUTTON ' '
	This button sets the ventilation amount; refer to the HRV manual for more details.		This button is a multi-purpose button. Depending on the previous manipulations of the user, it can have following functions: 1 select the operation mode of the installation (FAN, DRY, AUTOMATIC, COOLING, HEATING) 2 toggle between minimum temperature and maximum temperature when in limit operation
28	INSPECTION/TEST OPERATION BUTTON ' TEST '	34	SETPOINT/LIMIT BUTTON ' '
	Not used, for service purposes only.		This button toggles between setpoint, limit operation or 'OFF' (programming mode only).
29	PROGRAMMING BUTTON ' '	35	FAN SPEED BUTTON ' '
	This button is a multi-purpose button. Depending on the previous manipulations of the user, the programming button can have various functions.		This button toggles between L (Low), H (High), HH (very High), (Automatic).
30	SCHEDULE TIMER BUTTON ' '	36	AIR FLOW DIRECTION ADJUST BUTTON ' '
	This button enables or disables the schedule timer.		This button enables to adjust the air flow direction.
31	TIME ADJUST BUTTON ' '	37	AIR FILTER CLEANING TIME ICON RESET BUTTON ' '
	These buttons are used to adjust the clock or, when in programming mode, to adjust the programmed action time. Both buttons have an auto-repeat function.		This button is used to reset the air filter cleaning time icon.
32	TEMPERATURE ADJUST BUTTON ' '		
	These buttons are used to adjust the current setpoint or, when in programming mode, to adjust the programmed setpoint temperature (step = 1°C). Both buttons are also used to adjust the day of the week.		