6.22 Malfunction of Transmission (Between Indoor Unit and Remote Controller)

Remote Controller Display **U**5

LED Display

A(H1P) — 1(H2P) — 2(H3P) —

Applicable Models

R(Y)

Method of Malfunction Detection


Microcomputer checks if transmission between indoor unit and remote controller is normal.

Malfunction Decision Conditions When transmission is not carried out normally for a certain amount of time

Supposed Causes

- Failure of remote controller
- Failure of indoor PC board
- Outside cause (noise, etc.)
- Connection of 2 master remote controllers (When using 2 remote controllers)

Troubleshooting

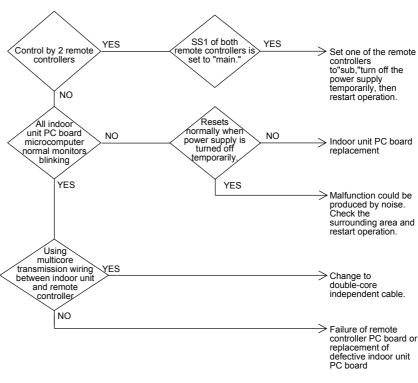

(SF025)